
Link G4+ Kurofune pinout

ecurecovery.com/pinouts/link-ecu/g4-plus-kurofune · Every pin from Link's own guide for this ECU, read twice · data checked 2026-11-01

Connector A · 22-pin

AS DRAWN IN LINK'S GUIDE FOR THIS ECU; THE GUIDE DOES NOT SAY FROM WHICH SIDE

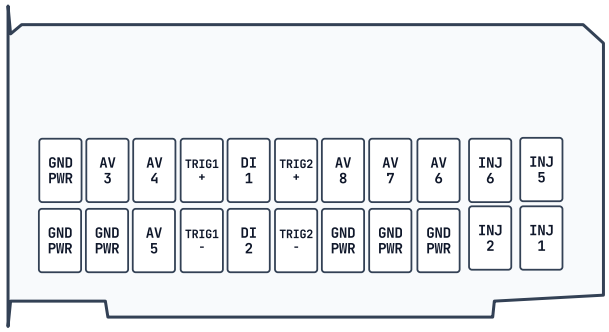


Connector B · 16-pin

AS DRAWN IN LINK'S GUIDE FOR THIS ECU; THE GUIDE DOES NOT SAY FROM WHICH SIDE




Connector C · 26-pin

AS DRAWN IN LINK'S GUIDE FOR THIS ECU; THE GUIDE DOES NOT SAY FROM WHICH SIDE

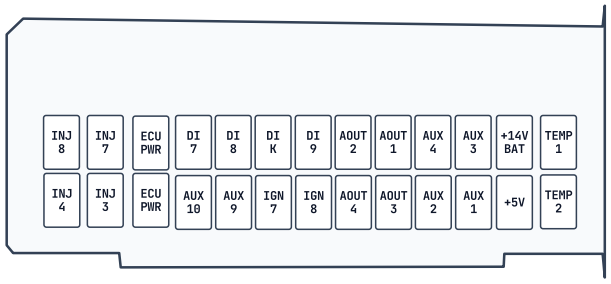

Connector XS · 8-pin

AS DRAWN IN LINK'S GUIDE FOR THIS ECU; THE GUIDE DOES NOT SAY FROM WHICH SIDE

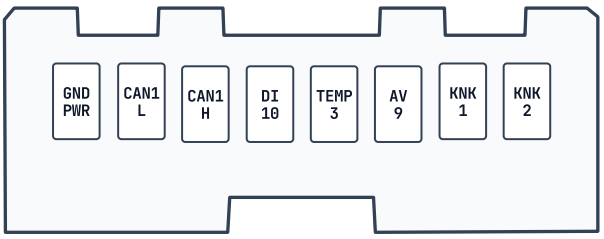

Link G4+ Kurofune connector A pinout (22-pin)

Pin	Function
1	Inj 1
2	Inj 2
3	GND
4	GND
5	GND
6	Trigger 2 -
7	DI 2
8	Trigger 1 -
9	AN Volt 5
10	GND
11	GND
12	Inj 5
13	Inj 6
14	AN Volt 6
15	AN Volt 7
16	AN Volt 8

Pin	Function
17	Trigger 2 +
18	DI 1
19	Trigger 1 +
20	AN Volt 4
21	AN Volt 3
22	GND

Link G4+ Kurofune connector B pinout (16-pin)

Pin	Function
23	AN Volt 2
24	AN Volt 1
25	DI 3
26	DI 4
27	DI 5
28	DI 6
29	Aux 7
30	Aux 5
31	Ign 1
32	Ign 2
33	Ign 3
34	Ign 4
35	Ign 5
36	Ign 6
37	Aux 8
38	Aux 6

Link G4+ Kurofune connector C pinout (26-pin)

Pin	Function
39	AN Temp 2
40	+5V Out
41	Aux 1
42	Aux 2
43	AN Out 3
44	AN Out 4
45	Ign 8
46	Ign 7
47	Aux 9
48	Aux 10
49	+14V
50	Inj 3
51	Inj 4
52	AN Temp 1
53	+14V Batt
54	Aux 3
55	Aux 4
56	AN Out 1
57	AN Out 2
58	DI 9
59	DI K
60	DI 8

Pin	Function
61	DI 7
62	+14V
63	Inj 7
64	Inj 8

Link G4+ Kurofune connector XS pinout (8-pin)

Pin	Function
J1	GND
J2	CAN1 L
J3	CAN1 H
J4	DI 10
J5	AN Temp 3
J6	AN Volt 9
J7	KNOCK 1
J8	KNOCK 2

Where this comes from

Link quick start guide for this ECU

Link G4+ Kurofune Quick Start Guide