
# Link G4+ Monsoon pinout

ecurecovery.com/pinouts/link-ecu/g4-plus-monsoon · Every pin from Link's own guide for this ECU, read twice · data checked 2026-11-01

### 34-pin connector

LOOKING INTO THE ECU HEADER (THE SAME AS THE WIRE SIDE OF THE LOOM PLUG), AS LINK DRAWS IT

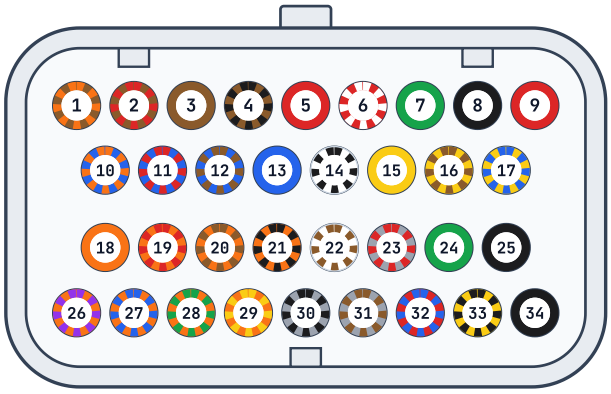


## Link G4+ Monsoon 34-pin connector pinout

| Pin | Function | Wire |
|---|---|---|
| A1 | Inj 4 | Brown/Orange |
| A2 | Inj 3 | Brown/Red |
| A3 | Inj 2 | Brown |
| A4 | Inj 1 | Brown/Black |
| A5 | +14V | Red |
| A6 | DI 4 | Red/White |
| A7 | Shield/Gnd | Green |
| A8 | Trig 1 | Black |
| A9 | Trig 2 | Red |
| A10 | Ign 4 | Blue/Orange |
| A11 | Ign 3 | Blue/Red |
| A12 | Ign 2 | Blue/Brown |
| A13 | Ign 1 | Blue |
| A14 | An Volt 4 | White/Black |
| A15 | Temp 1 | Yellow |
| A16 | Temp 2 | Yellow/Brown |
| A17 | An Volt 1 | Yellow/Blue |
| A18 | Aux 4 | Orange |
| A19 | Aux 3 | Orange/Red |
| A20 | Aux 2 | Orange/Brown |
| A21 | Aux 1 | Orange/Black |
| A22 | An Volt 2 | White/Brown |
| A23 | DI 3 | Grey/Red |
| A24 | Gnd Out | Green |
| A25 | Ground | Black |
| A26 | Aux 6 | Orange/Purple |
| A27 | Aux 5 | Orange/Blue |
| A28 | CAN H | Orange/Green |
| A29 | CAN L | Orange/Yellow |
| A30 | DI 1 | Grey/Black |

| Pin | Function | Wire |
|---|---|---|
| A31 | DI 2 | Grey/Brown |
| A32 | +5V | Red/Blue |
| A33 | An Volt 3 | Yellow/Black |
| A34 | Ground | Black |

## Where this comes from

**Link quick start guide for this ECU**

Link G4+ Monsoon Quick Start Guide

**Link guide for the G4X MonsoonX, the same pin**

Link G4X MonsoonX Quick Start Guide (the sister ECU, same connector)

**Plug drawing: TE Connectivity customer drawing (used for the drawing only)** Third party

TE Connectivity customer drawing C-2-1437285-3, Superseal 1.0 34/26-position plug housings (copy hosted by Corsa Technic)